

## Breville Customer Service Centre

### Australian Customers

**Mail:** Locked Bag 2000  
Botany NSW 1455  
AUSTRALIA

**Phone:** 1300 139 798

**Fax:** (02) 9700 1342

**Email:** Customer Service:  
askus@breville.com.au

**Web:** [www.breville.com.au](http://www.breville.com.au)

### New Zealand Customers

**Mail:** Private Bag 94411  
Botany Manukau 2163  
Auckland NEW ZEALAND

**Phone:** 0800 273 845

**Fax:** 0800 288 513

**Email:** Customer Service:  
askus@breville.co.nz

**Web:** [www.breville.co.nz](http://www.breville.co.nz)

**Breville®**  
Thought for food

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.  
Copyright Breville Pty. Ltd. 2015.

Due to continued product improvement, the products illustrated/photographed  
in this brochure may vary slightly from the actual product.

# *Lavish Velvet & Lush Plush*

Heated Throw Instruction Book - BHT331 & BHT632



**Breville®**



## Contents

- 2 Breville Recommends Safety First
- 8 Components
- 10 Functions
- 12 Care & Cleaning

## BREVILLE RECOMMENDS SAFETY FIRST

**At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.**

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove any packaging material and promotional stickers before using the Breville heated throw for the first time.
- Use the heated throw only with the detachable controller CTL151 supplied. Refer to the markings on the heating unit for the model number of the controller.
- Connect only to 230V or 240V power outlet.
- Do not pull the heated throw by the flexible cord or use the cord to carry the heated throw.
- Do not attempt to expose the internal wires.
- Extended application at the HIGH heat setting may result in skin irritation or burns.
- Do not use the heated throw on areas of sensitive skin or areas insensitive to burns.

- Do not use the heated throw with any incapacitated person, an infant or a person insensitive to heat.
- Children under the age of three are not to use this heated throw due to their inability to react to overheating.
- The heated throw is not to be used on or by an invalid, a sleeping or unconscious person, or a person with poor blood circulation unless carefully attended.
- This heated throw is to be used as a wrap only.
- This heated throw is not an electric blanket or an under-blanket.
- This heated throw is not intended for medical use in hospitals.
- This heated throw is for household use only.
- Do not use this heated throw for anything other than its intended use. Do not use outdoors.
- Avoid sharp objects, Do not insert pins or any sharp object into the heated throw as they may damage the electrical wiring.
- Do not use the heated throw in a folded, rucked or rolled state.
- Do not use with wires tucked in.
- Do not sit on, crease or crush the heated throw.
- Do not use the heated throw if it is wet or moist.
- Do not use under clothing, wraps or blankets.
- Do not use the heated throw as an electric blanket. It is not designed for all-night use.
- This heated throw must not be used over a water bed.
- If any abnormality or defect in operation of this heated throw is observed, discontinue its use immediately and contact a Breville Service Centre.
- Do not fall asleep when using the heated throw. This product is not intended for use while sleeping.

- Do not use the heated throw for animals or pet care.
- Switch the heated throw control to the 'OFF' position, switch off at the power outlet and remove the plug when the heated throw is not in use or before storing.
- Do not dry clean the heated throw. Dry cleaning may have a detrimental effect on the heated throw. Follow the instructions in the Care, Cleaning and Storage section when cleaning and storing the heated throw.
- Do not iron the heated throw.
- Do not bleach the heated throw.
- Regularly inspect the heated throw, power supply cord, plug and controller for any wear, damage or misuse. If signs of these are detected, immediately cease use of the heated throw and return the entire unit to your nearest Breville Service Centre for examination, replacement or repair.
- It is recommended that a qualified and registered person inspect your heated throw after each 3 years of use.
- When storing the heated throw, allow it to cool down before folding.
- When storing, fold neatly, but not tightly, (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed upon it.
- Do not place any items on top of the heated throw when storing to avoid creasing.
- There are no customer serviceable parts inside. The heated throw is fitted with a specially designed controller and no attempt should be made to repair it or to replace the protective fuse. Have the heated throw serviced only by a qualified service agent at your nearest Breville Service Centre.

 
# IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.


- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

FOR HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS





# Components

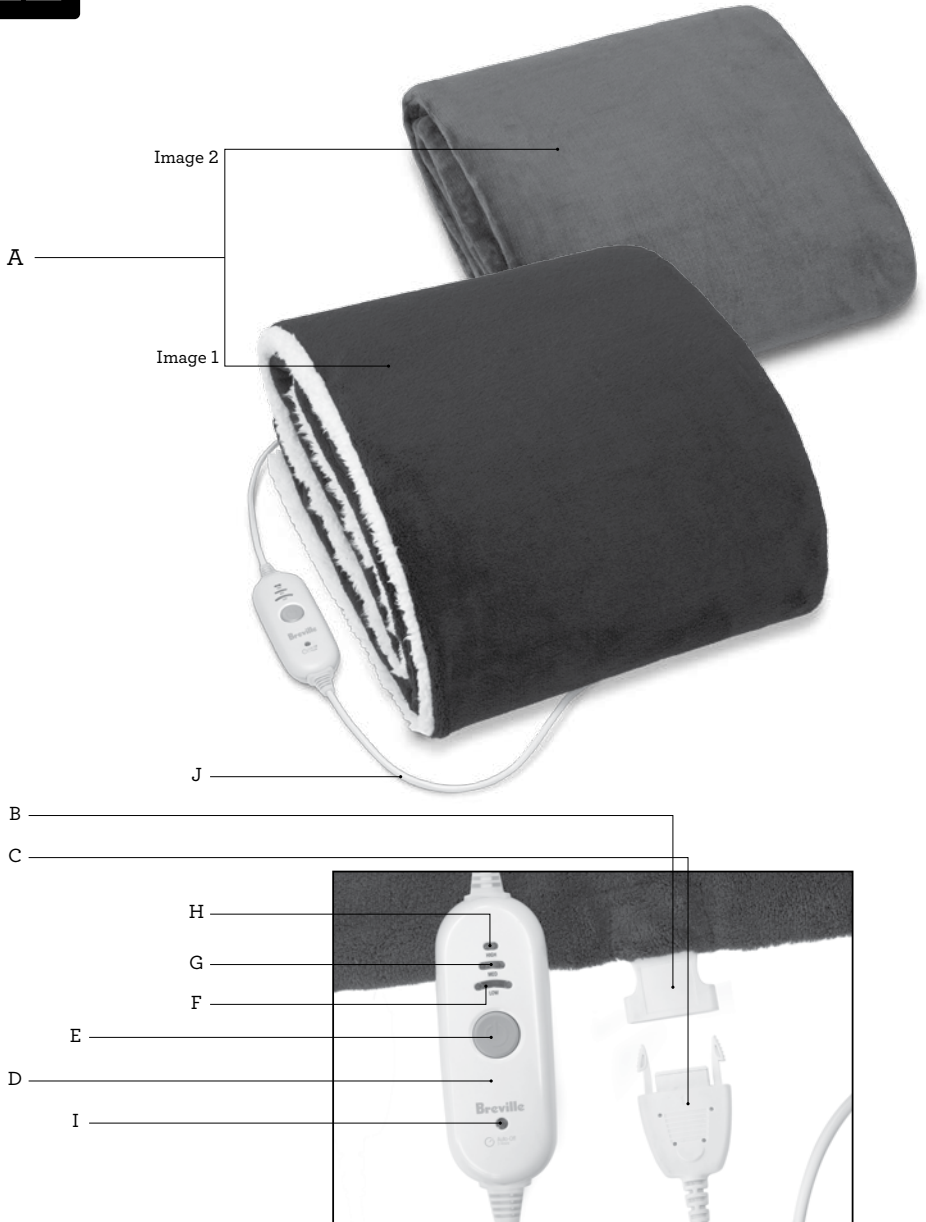 

**A. Heated Throw**

**(Dimensions approx. 1300 x 1600mm WxL)**

- Image 1: BHT331MDN Reversible

MicroPlush & Sherpa Throw

- Image 2: BHT632DSK Velvet Throw

**B. Controller connector:** found attached to the heated throw

**C. Controller plug with locking clips:** found at one end of the power cord

**D. Detachable controller**

**E. Power/Heat setting button:** press button to turn throw on/off and to adjust the heat settings

**F. LOW heat with orange colour LED indicator light**

**G. MEDIUM heat with blue colour LED indicator light**

**H. HIGH heat with green colour LED indicator light**

**I. Auto-off with red colour indicator light;** after 3 hours the heated throw will automatically turn off

**J. 1.8m power cord**

**Not Shown:**

- Flexible heating wire
- Safety overheat protection
- Reusable poly bag: ideal for storing the heated throw and controller when not in use



## Functions

### BEFORE FIRST USE

Remove any promotional material and packaging from the heated throw.

The poly bag is reusable and can be kept for safely storing the heated throw when it is not in use.

The controller can be found unattached and wrapped inside the throw.



### NOTE

The heated throw is designed to be reversible. Heat will generate equally from either side of the throw.

### TO CONNECT THE CONTROLLER

The heated throw has a detachable controller which allows the throw to be machine washable.

 
Ensure the heated throw power/heat button is in the off position and not pressed and that the unit is not connected to a power supply.

To connect the controller, insert the controller plug found at the end of the power cord to the controller connector on the throw. Ensure the locking clips align with the controller connector.



### TO DETACH THE CONTROLLER

Press and hold down the locking clips. Pull the controller plug out of the controller connector.

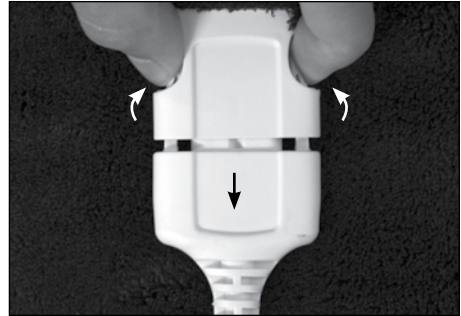

### OPERATING THE HEATED THROW

Ensure the heated throw power/heat setting button is in the off position and not pressed.

Plug the power cord into a 230V or 240V power outlet and switch the power on.

Press the power/heat settings button once to turn the heated throw on.

### ADJUSTING THE TEMPERATURE

The three heat settings allow you to choose the right setting for you depending on your personal comfort.

Adjust the heat temperature by pressing the power/heat setting button until the desired indicator light illuminates:

#### LOW heat setting

- orange coloured LED indicator light

#### MEDIUM heat setting

- blue coloured LED indicator light

#### HIGH heat setting

- green coloured LED indicator light



### NOTE

The heated throw will take 40 minutes to reach the desired temperature, however you will start feeling warm after 15-20 minutes.

## **AUTO-OFF PROTECTION**

For added safety, the heated throw is designed with auto-off protection.

After 3 hours the heated throw will automatically turn off and the red auto-off indicator light will illuminate and flash.

To restarted or continue using the heated throw, press the power/heat setting button to turn the heated throw on, then select your desired heat setting.

## **TURNING OFF THE HEATED THROW**

Press the power/heat setting button until none of the heat setting indicator lights are illuminated. The heated throw is now in the off position.

Switch off at the power supply and unplug the power cord from the power outlet.



### **NOTE**

For added safety, after three hours the heated throw automatically switches off.



### **NOTE**

Do not leave the heated throw in contact with skin for excessive periods of time. For continuous use, it is recommended that the LOW heat setting should be used.



## Care & Cleaning



### NOTE

DO NOT dry clean. DO NOT iron.



### WARNING

The controller must be removed from the heated throw before washing.

## USE ONLY THE FOLLOWING INSTRUCTIONS

Before cleaning, ensure that the controller is unplugged from the power supply and that the controller is disconnected from the heated throw.

### SPOT CLEANING

Sponge the affected area using a lukewarm neutral detergent or mild soapy solution. Follow this with sponging, using a clean water solution. Remove any excess water by compressing the wet area between absorbent towels.

### HAND WASHING

- Immerse the heated throw with controller removed in a soapy solution of lukewarm water and mild, neutral detergent.
- Soak for five minutes then gently squeeze the solution through the throw.
- Rinse thoroughly in clean, lukewarm water, then gently squeeze any excess water from the heated throw.



### WARNING

The controller must be removed from the heated throw before washing. Never immerse the detachable controller in water or any other liquid.



### WARNING

DO NOT tumble dry.

## MACHINE WASHING

The heated throw can be washed in a domestic washing machine (size permitting) or by a commercial laundry.

- To wash your throw in a domestic washing machine, wash on the WOOL or DELICATES setting using a neutral wool detergent or mild soap solution.
- DO NOT wash on a HOT cycle as the temperature must be kept below 30 °C.
- DO NOT use high speed or extra spin cycles.
- DO NOT machine wash with the controller connected to the heated throw.

## DRYING

- Drape the heated throw across a clothes line and drip dry.
- DO NOT use pegs to secure the heated throw in position.
- DO NOT dry with a hair dryer or heater.
- DO NOT twist or wring dry.
- DO NOT tumble dry the heated throw as it may damage the internal heating wires.
- DO NOT use moth balls or sprays on the heated throw.

## STORAGE

- Pack the heated throw in its original poly bag packaging for best protection.
- When storing the heated throw, allow it to cool down before folding.
- DO NOT store the heated throw when wet.
- Detach the controller from the heated throw before storing.
- When storing, roll neatly, but not tightly, in the poly bag without sharp bends in the heating wires.
- Place the detachable controller on top of the rolled throw before zipping the bag closed.
- Store in a cool, clean and dry location.
- DO NOT place any items on top of the heated throw when storing to avoid creasing.





