

Breville

Breville Customer Service Centre

Australian Customers

Mail: PO Box 22
Botany NSW 2019
AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9384 9601

Email: Customer Service:
askus@breville.com.au

New Zealand Customers

Mail: Private Bag 94411
Botany Manukau 2163
Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Email: Customer Service:
askus@breville.co.nz

www.breville.com.au

www.breville.co.nz

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2014.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

Breville

the Quick Roast™

Instruction Booklet



BMO715

CONTENTS

- 3** Breville recommends safety first
- 8** Know your Breville product
- 10** Assembling your Breville product
- 12** Operating your Breville product
- 17** Care & cleaning

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material and promotional labels before using the Breville microwave oven for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover that is fitted to the power plug of the Breville microwave oven.
- Do not place the microwave oven near the edge of a bench or table during operation. Ensure all surfaces are level, clean and free of water or any other substances.
- Do not place the microwave oven on or near a hot gas or electric burner, or where it could touch a heated oven.
- Microwave oven to be installed as freestanding unit only. When using the microwave oven, provide adequate air space above and on all sides for air circulation. (see page 10 Installation, point 2).
- Always operate the microwave oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use the microwave oven on a metal surface, for example a sink drain board.
- Always ensure the microwave oven is properly assembled before connecting to the power outlet and operating. Do not use the oven without the turntable roller and glass turntable in place. Ensure the glass turntable is positioned correctly into the indents on the turntable roller.
- The microwave oven is not intended to be operated by means of an external timer or separate remote control system.
- Never use the microwave oven without food or water in the oven cavity. Operating the microwave oven when empty could cause damage to the appliance.
- Do not leave the microwave oven unattended when in use.
- Do not touch hot surfaces. Allow the microwave oven to cool before moving or cleaning any parts.
- Always ensure the microwave oven is turned off at the power outlet and the cord is unplugged from the power outlet before attempting to move the appliance, when not in use, if left unattended and before disassembling, cleaning or storing.
- Keep the appliance clean. Follow the cleaning instructions provided in this book (page 17).
- Always turn the microwave oven off by pressing the STOP/CLEAR button, switch off at the power outlet and unplug at the power outlet when it is not in use.
- Before cleaning, always press STOP/CLEAR position, switch off at the power outlet and unplug at the power outlet.
- Fire may occur if the oven is covered or touches flammable material, including curtains, draperies, walls and the like when in operation
- Caution should be taken when toasting and grilling high oil content foods, such as pine nuts and walnuts. They may catch fire. If this occurs, please keep the oven door closed and switch off and unplug oven until flame has extinguished.

BREVILLE RECOMMENDS SAFETY FIRST

- Do not place cardboard, plastic, paper or other flammable materials into the oven.
- The temperature of accessible surfaces will be high when the appliance is in operation and also for some time after use.
- Always wear protective, insulated oven mitts when inserting, removing or handling items from the oven.
- Always use extreme caution when removing any of the accessories or disposing of hot grease. Allow the oven to cool before handling.
- Do not place hands inside the oven during operation.
- Do not insert oversized foods into the oven as they create risk of fire or electric shock.
- It is recommended to use only the Breville provided accessories with this oven. Do not store any materials other than the Breville oven accessories in the oven when not in use.
- Do not clean interior of the oven with metal scouring pads as pieces can break off the pad and touch electrical parts creating a risk of electric shock.
- Do not attempt to operate the oven by any methods other than those described in this book.
- The top of the oven is very hot during and after operation. Do not store any item on top of the oven when in use and when stored.
- Do not touch hot surfaces. Appliance surfaces, including the door and outer surface of the oven are hot during and after operation. To prevent burns or personal injury, always use protective hot pads or insulated oven mitts, or use handles and knobs where available, when inserting, removing or handling items from the oven. Alternatively allow the oven to cool down before handling.
- The use of any accessory attachments not recommended by Breville may cause injuries.
- Use only the wire rack provided by Breville. The wire rack must always be placed at the centre of the glass turntable and make sure the wire rack does not come in contact with the oven cavity which can cause electric shock.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.

BREVILLE RECOMMENDS SAFETY FIRST

- The installation of a residual current device (safety switch is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or stream sensitive materials and provide adequate space above and on all sides for air circulation.
- If the door seals or any of the microwave oven is damaged, the microwave oven must not be operated until it has been inspected and/or repaired at an authorised Breville Service Centre.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating or warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Ensure all food containers and/or plates are suitable for use in the microwave oven. This should be done prior to preparing food for heating or cooking in the microwave oven. Monitor foods and liquids heating or cooking in the microwave oven at all times due to the possibility of containers igniting.
- Containers or plates suitable for use in the microwave oven should not exceed the width of the glass turntable as this may impede the rotation of the turntable and result in food being unevenly cooked.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Some containers and/or plates may appear suitable for use in the microwave oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.

SPECIAL SAFETY INSTRUCTIONS FOR YOUR MICROWAVE OVEN

- Wipe the oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the microwave oven cavity to overheat and may cause the microwave oven to smoke or catch fire.
- The microwave oven should be cleaned regularly and any food splattering inside the cavity should be removed. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the microwave oven and possibly resulting in a hazardous situation.
- Food and/or liquids should not be heated or cooked directly on the glass turntable. Food and/or liquids must be placed into a suitable microwave-proof container before placing onto the glass turntable.
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified a suitable for use by the manufacturer, due to the possibility of containers exploding or igniting.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Metal clips or twist ties should be removed from the packaging as these could cause sparking and/or fire.

BREVILLE RECOMMENDS SAFETY FIRST

- Do not use recycled paper or kitchen paper towelling when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the microwave oven as these could cause sparking and/or fire.
- Only use utensils that are suitable for use in microwave ovens.
- Food grade foil should not be used in the microwave oven as this could cause sparking and/or fire.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the microwave oven.
- Feeding bottles and baby food jars should have lids and caps removed before warming or heating in the microwave oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.
- Always ensure the temperature of food or drink which has been heated or cooked in the microwave oven has been tested before eating, drinking or serving to others, especially children, disabled or elderly people.
- The heating of liquids and beverages in the microwave oven can result in delayed eruptive boiling. Care must be taken when handling any containers containing hot liquids or beverages.
- Do not heat popcorn in the microwave oven unless it has been commercially packaged for microwave use. There may be a number of un-popped kernels that may overcook and burn when popping popcorn. Do not use oil unless recommended by the manufacturer. Do not pop popcorn longer than the manufacturer's instructions (popping time should not exceed 3 minutes). Longer cooking could cause scorching or fire.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc) without first piercing the membrane several times with a fork or similar utensils.
- Eggs in the shell and whole hard boiled eggs should not be cooked or heated in the microwave oven as they may explode during cooking, at the end of cooking or after removing from the microwave oven.
- Do not heat oil or fat in the microwave oven. Doing so may cause the microwave oven and/or the oil to overheat and/or ignite.
- If any smoke is observed, switch off and unplug the microwave oven at the power outlet. Keep the door closed to stifle any flames.
- Do not attempt to operate the microwave oven by any method other than those described in this instruction book.
- Do not disconnect the microwave oven from the power supply by pulling on the cord to unplug from the power outlet.
- When storing the microwave oven loosely wind the cord. Do not wrap the cord around the microwave oven.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- The glass window has been specially treated to make it stronger, more durable and safer than ordinary glass, however it is not unbreakable. If dropped or struck extremely hard, it may break or weaken, and could at a later time shatter into many small pieces without apparent cause.

WARNING

- Do not attempt to operate the oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- If the door or door seals are damaged, the oven must not be operated until it has been repaired by a Breville Service Centre. It is particularly important that the oven door closes properly and that there is no damage to the: (1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces.
- Do not put any foreign material between the door and door jam of the microwave oven as this could cause excessive leakage of microwave energy.
- It is hazardous for anyone other than a Breville Service Centre to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperature generated.
- Surfaces may be hot during and after use.
- If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the product and lead to a dangerous situation.

SPECIFICATIONS	
POWER CONSUMPTION	230-240V~, 50Hz, 2300W
CONVECTION OVEN POWER	2300W
GRILL POWER	1100W
MICROWAVE OVEN POWER	1450W
MICROWAVE OVEN OUTPUT	900W 2450MHz
OUTSIDE DIMENSIONS	520mm (H) 510mm (W) 325.7mm (D)
GLASS TURNTABLE DIAMETER	315mm
NET WEIGHT	Approx. 19.9kg
OVEN CAPACITY	30 Litres

These specifications may change without notice.

SAVE THESE INSTRUCTIONS



A. LED Display
Shows time, cooking progress and preset functions.

B. Control panel

C. Door release (pull handle)

D. Viewing window

E. Turntable assembly & installation

 
a. Grill rack

b. Hub (under glass)


c. Glass turntable

d. Turntable shaft

e. Turntable ring assembly

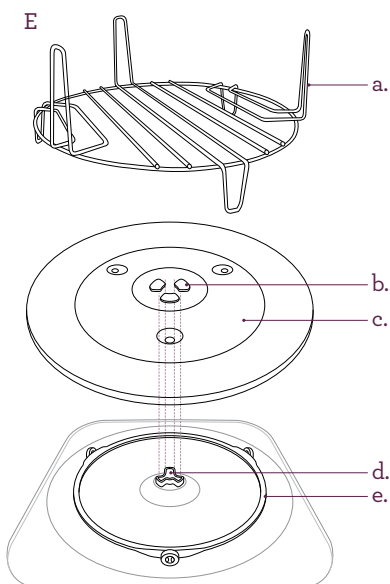

KNOW YOUR BREVILLE PRODUCT

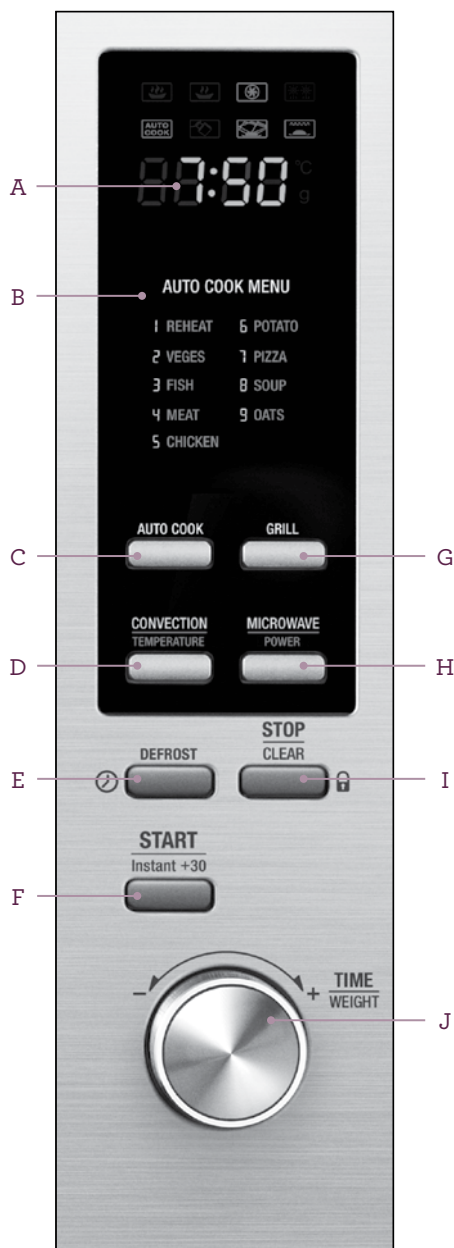 

A. LED DISPLAY SCREEN

Shows selected cooking time, power, symbols and time-of-day.

B. AUTO COOK MENU (1-9)

List of AUTO MENU settings available.

C. AUTO COOK

Press to select menu functions (1-9).

D. CONVECTION

Press CONVECTION to initiate convection function and select desired cooking temperature and time.

E. DEFROST & CLOCK

Press to toggle between Time and Weight Defrost. Weight Defrost automatically sets the defrosting time and power level once the weight of the food is entered. Time Defrost automatically sets the power level once defrosting time is entered. To set the clock, press and hold for 3 seconds.

F. START/ +30 SEC INSTANT START

Press to start the cooking or defrosting functions. The cooking symbol will appear on the display and the interior of oven light will turn on, the interior fan will operate and the turntable will rotate. Each additional press of the button will add 30 seconds to the cooking time.

G. GRILL

Press GRILL button once and press START to initiate grill function.

H. MICROWAVE

Press to set power level (10-100%).

I. STOP/CLEAR & CHILD LOCK

Press to cancel the selected microwave power level, convection, grill or defrost times that are previously programmed. The time of the day clock cannot be cancelled by pressing the STOP/CLEAR button. Child lock can also be initiated by holding down the STOP/CLEAR button for 3 seconds.

J. TIME/WEIGHT DIAL

Turn dial to select time or weight for individual settings.

 
BEFORE FIRST USE

Remove and safely discard any packaging material and labels before using the microwave oven for the first time. Carefully unpack the microwave oven and keep all the packing material until all the parts of the microwave oven have been found and the appliance has been assembled.

To remove any dust that may have accumulated during packing, wash the roller ring and glass turntable tray in warm soapy water, rinse in clean water then dry thoroughly. Wipe the interior and exterior of the microwave oven with a soft, damp cloth then dry thoroughly.

ASSEMBLING THE GLASS TURNTABLE AND TURNING ON THE MICROWAVE OVEN


1. Place the roller ring into position in the indented space in the oven cavity base.
2. Insert the glass turntable into position, matching the indents (hub) on the base of the glass turntable with the indents in the shaft located in the centre of the oven cavity base.

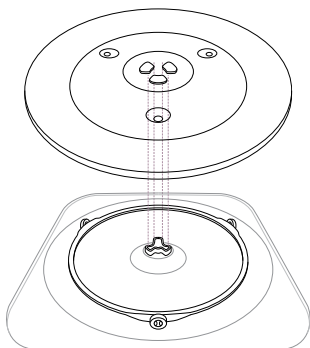

3. Plug the power cord into a 240V~ power outlet. Switch on at the power outlet. The microwave oven is now on.

INSTALLATION

 1. Select a level surface that provides enough open space for the intake and/or outlet vents.
2. A minimum clearance of 20cm is required between the oven and any adjacent walls.
 - Leave a minimum clearance of 30cm above the oven.
 - Do not remove the legs from the bottom of the oven.
3. Blocking the intake and/or outlet openings can damage the oven.
4. Place the oven as far away from radios and TV as possible. Operation of microwave oven may interfere with your radio or TV reception.
5. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

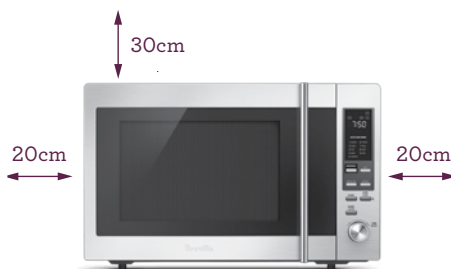

WARNING

- When using the grill rack, ensure it is placed securely in the centre of the turntable, avoiding any contact with the surrounding cavity. Contact with the cavity will result in sparking and could damage the microwave.
- Ensure plates are grill, oven and microwave safe. Avoid placing Pyrex on the grill rack in the upper position as it may overheat and shatter.
- To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your microwave oven (or other products) when it is in use.
- Do not install oven over a range cooktop or other heat-producing appliances. If installed near or over a heat source, the oven could be damaged and the warranty would be void.
- Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact a Breville service centre.
- Do not immerse the microwave oven, power cord or plug in water or any other liquid.

SETTING THE CLOCK

When power is activated, the LED will display 0:00 and the buzzer will beep once.

1. Press and hold DEFROST button for 3 seconds, the hour figure will flash.
2. Turn dial to adjust the hour figures, the input time should be within 0-23.
3. Press START button, the minute figures will flash.
4. Turn dial to adjust the minutes figures, the input time should be within 0-59.
5. Press START button to finish clock setting. ‘:’ will flash, and the time will illuminate.

NOTE

During the process of clock setting, if you press STOP/CLEAR, the oven will go back to the previous status automatically.

In the event of a power failure or if the microwave is unplugged, the clock will have to be reset.

OPERATING YOUR NEW BREVILLE PRODUCT

MICROWAVE COOKING



1. Using the dial, input the cooking time, maximum cooking time is 95 minutes.

NOTE

Turning the dial clockwise, will increase time. Turning the dial anticlockwise will reduce time.

2. Press START/+30 SEC button to commence operation.

NOTE

This mode will have microwave oven operating at 100% power level.

MICROWAVE COOKING WITH POWER LEVELS

To set power levels press the MICROWAVE|POWER button and continue to press the MICROWAVE|POWER button until desired power level is selected.

1. Press MICROWAVE|POWER button (continue to press) until desired power level is selected.
2. Using the dial input the desired cooking time.
3. Press START/+30SEC button to commence operation.

Example: Microwave oven cooking with 50% power for 15 minutes:

1. Press the MICROWAVE|POWER button six times: 50%
2. Dial clockwise until 15:00 shows.



3. Press START/+30 SEC button to commence operation.

MICROWAVE POWER LEVELS

PRESS	MICROWAVE POWER	DISPLAY
1 time	100%	P100
2 times	90%	P90
3 times	80%	P80
4 times	70%	P70
5 times	60%	P60
6 times	50%	P50
7 times	40%	P40
8 times	30%	P30
9 times	20%	P20
10 times	10%	P10

INSTANT START

When the unit is in waiting state, press START/+30 SEC instantly to start cooking at 30 seconds with 100% microwave power. Each additional press will increase the cooking time by 30 seconds only, until maximum cooking time to 95 minutes. Power level will be default at 100% for INSTANT START

OPERATING YOUR NEW BREVILLE PRODUCT

Example: Set 3 minutes instant start:

Press START/+30 SEC once to start cooking, LED will display 0:30.

Press START/+30 SEC again for 5 times, and the cooking time will be 3 minutes.

NOTE

Power level and time can be changed during microwave oven operation only.

To change Power level during microwave oven function, press the Microwave button which will display the current set power level and then continue pressing until desired power level is selected.

Time can be adjusted by rotating the time/weight dial during cooking process.

GRILL

1. Press GRILL button and "Grill" will be displayed on LED screen.



NOTE

When using the grill rack, ensure it is placed securely in the centre of the turntable, avoiding any contact with the surrounding cavity. Contact with the cavity will result in sparking and could damage the microwave.

2. Turn time dial to select desired time and press start. Time range 5 seconds to 95 minutes.

CONVECTION

1. Press CONVECTION|TEMPERATURE button and default temperature 140°C will be shown on LED display.



2. Continue pressing CONVECTION|TEMPERATURE button until desired temperature is set.
3. Turn the dial to select desired cooking time then press start. Temperature range is from 140–230°C.

COMBINATION COOKING

Microwave, Grill and Convection functions can be used independently or in combination.

To enable combination function, press the MICROWAVE, GRILL or CONVECTION buttons until desired combination function is selected.

The MICROWAVE, GRILL and CONVECTION buttons can be pressed to select and deselect each function. The corresponding icons will appear in the LED display to indicate the functions selected.

NOTE

To deselect the first entered function press the STOP/CLEAR button

Temperature and power level cannot be adjusted in combination mode.

Example: To select Microwave and Convection, input the following steps:

1. Press MICROWAVE button once to display the microwave icon. To deselect, press the STOP/CLEAR button.

OPERATING YOUR NEW BREVILLE PRODUCT



2. Press CONVECTION button once to display the microwave and convection icons. To deselect, press the CONVECTION button once more.



3. Turn the dial clockwise until desired time is selected.
4. Press START/+30 SEC button to commence cooking.

TIPS ON DEFROSTING

- Before defrosting meat, remove the freezer bag or wrap to prevent meat sitting in 'drip', which will otherwise boil as the meat defrosts causing meat to go grey and begin to stew. To remove frozen meat from freezer wrappings, defrost for a few minutes so the wrap is easy to remove.
- Remove meat from Styrofoam tray, as they are not microwave safe.
- Place meat onto a rack with a drip tray to catch juices. Alternatively, place onto a microwave safe plate that is lined with absorbent paper and elevate on an upturned bowl or cup.
- Check the meat throughout the defrosting time. As outer portions of meat thaw, remove them from the microwave. If the edges of meat feel warm, stop microwaving and allow meat to stand for a few minutes or until edges are cold again.

- After defrosting the meat allow meat to stand at room temperature for 5-10 minutes to completely thaw.
- The energy required for defrosting is much less than for cooking, the microwave causes the ice formed in the food to melt rather than heat.

WEIGHT DEFROST

Example: Defrost beef of 500g:

1. Press DEFROST button once, LED will display dEF1.
2. Dial clockwise until 500 is shown with 'g' symbol displayed on LED. Range of defrosting weight is 100g-2000g.
3. Press START/+30 SEC to start defrosting.

TIME DEFROST

Example: To defrost piece of beef in 10 minutes:

1. Press DEFROST button twice, LED will display dEF2.
2. Dial clockwise until 10:00 is displayed.



3. Press START/+30 SEC to start defrosting.

AUTO COOK

To enable pre-programmed automatic functions, press the "AUTO COOK" button until desired auto cook function is selected.

Example: To select Auto Cook Meat function, input the following steps:

1. Press "AUTO COOK" button 4 times to display "4".
2. Turn the dial clockwise until desired weight of the food item is selected (150g, 300g, 450g and 600g).
3. Press START/+30 SEC button to commence operation.

OPERATING YOUR NEW BREVILLE PRODUCT

TYPE	WEIGHT (G)/ VOLUME (ML)/ QUANTITY	DISPLAY	COOKING TIME
1 AUTO REHEAT	150g	150g	1'30"
	250g	250g	2'10"
	350g	350g	3'10"
	450g	450g	4'10"
	600g	600g	5'40"
2 VEGETABLE	150g	150g	2'40"
	350g	350g	4'40"
	500g	500g	6'20"
3 FISH	150g	150g	2'50"
	250g	250g	4'00"
	350g	350g	5'10"
	450g	450g	6'20"
	650g	650g	8'40"
4 MEAT	150g	150g	2'50"
	300g	300g	4'30"
	450g	450g	6'10"
	600g	600g	7'50"
5 CHICKEN	1kg	1000g	30'00"
	1.3kg	1300g	40'00"
	1.5kg	1500g	50'00"
6 POTATO	1 (230g)	1	5'00"
	2	2	7'40"
	3	3	9'40"
7 PIZZA	200g	200g	10'30"
	300g	300g	12'30"
	400g	400g	14'00"
8 SOUP	200ml	200	2'10"
	400ml	400	4'10"
	600ml	600	6'10"
9 OATS	40g	40g	5'20"
	120g	120g	9'20"
	240g	240g	14'30"

TIPS ON AUTO MENU SETTINGS

Auto Reheat

Will calculate the time required to reheat food above 60°C. Place food in/on microwave safe containers and cover with microwave safe lid, vented cling film or absorbent paper.

Vegetables

When cooking vegetables, always cook them covered with a vented lid, cling wrap or absorbent paper. Wash vegetables and shake lightly, leaving some water clinging to it. Place into microwave safe bowl and cover.

Fish

Place fish fillets into a microwave safe dish, evenly spaced. Place dish onto a rack or inverted bowl. Cover with a microwave safe lid or vented cling film.

Meat

Place meat on a rack which sits inside a shallow dish or on a rack which contains its own run off rim around the edge. Cook fat-side up first and turn over halfway through cooking. If cooking mince or diced meat, place into a microwave safe round casserole dish and stir halfway through cooking.

Chicken

This setting is suitable for whole or chicken pieces. To cook a whole chicken, place chicken in a shallow microwave and grill safe dish breast side up. To cook chicken pieces, arrange chicken so that the thicker ends are facing towards the outside of the dish. Turn chicken pieces twice during cooking.

Potatoes

Line turntable with absorbent paper. Prick each potato 3–4 times with a fork and arrange around the outer edges of turn table.

Pizza

Line turn table with absorbent paper. Place pizza slices directly on top. This will prevent crust from becoming soggy.

Soup

Choose a microwave safe bowl large enough to hold the corresponding amount of soup. Make sure that the soup comes up no higher than $\frac{3}{4}$ of the bowl. This prevents spillage or scolding from boiling liquid. Always stir soup halfway through cooking time. Cover with a microwave safe lid or vented microwave safe cling film.

Oats

Choose a microwave safe bowl large enough to hold the correct quantity. Make sure that the porridge comes up no higher than $\frac{3}{4}$ of the bowl. The ratio of oats to water is 1:5. Note that porridge will swell and double in size. Do not cover bowl and stir halfway through cooking.

SETTING THE DOOR SAFETY LOCK

The safety lock prevents unsupervised operation by young children. While in lock mode, the door can be opened, however the microwave cannot be turned on.

1. To set, press and hold STOP/CLEAR pad for 3 seconds. There will be a long 'beep' denoting unit is entering the children-lock state and a '🔒' will be displayed.
2. To unlock, press and hold STOP/CLEAR pad for 3 seconds, and there will be a long 'beep' denoting that the lock is released.

WHEN COOKING IS FINISHED

At the end of any cooking cycle, the microwave will beep 5 times.

DISPLAY SPECIFICATION

1. In waiting state, LED will display clock and '?' will flash.
2. In function setting state, LED will display the related setting.
3. In the operation and suspending state, LED will display the residual cooking time.

CARE & CLEANING

- Switch off the microwave oven at the power outlet and remove the plug from the power outlet before cleaning.
- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
- It is occasionally necessary to remove the glass turntable tray for cleaning. Wash the tray in warm sudsy water, rinse in clean water and dry thoroughly.
- The roller ring and oven floor should be cleaned regularly to ensure the turntable tray rotates correctly and avoid excessive noise. Simply wipe the bottom surface of the oven with a soft damp cloth. The roller ring may be washed in mild sudsy water, rinse in clean water and dry thoroughly. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
- Remove odours from your oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, microwave on High (100%) for 5 minutes. Wipe the oven cavity thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult your Breville Service Centre to have it replaced.
- Please do not dispose this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by the local council municipalities.

BEFORE YOU CALL FOR SERVICE

- Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the power outlet, wait 10 seconds and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the power outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the timer is set.
- Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

NOTE

If none of the above rectify the situation, then contact your Breville Service Centre. Do NOT try to adjust or repair the oven yourself.

