 


the Activ360™ Filter Replacement Instructions for LWA100/LWA200

- ① Lift the water tank from the purifier, remove the lid and set aside. Lifting by the ring, remove the filter cartridge from the filter holder, and then discard any water inside the upper and lower tanks.
- ② Remove the new filter cartridge from its packaging.
- ③ Immerse the filter in a bowl of tap water and gently shake until there are no air bubbles. Soak filter in the tap water for 10 minutes.
- ④ Once soaked, insert the filter into the filter holder of the upper tank and push down firmly to secure in place.
- ⑤ Place the upper tank back inside the lower tank.
- ⑥ To flush and activate the new filter cartridge, add 1L of water to the upper water tank, allowing the water to filter through.

Discard the collected water. Repeat step ⑥ once more so filter is fully flushed with 2 Litres of water before use.
- ⑦ Once flushed, fill the water tank with tap water up to the MAX line.
- ⑧ **For LWA100 Model:** Press and hold the 'START/CANCEL' button for 3 seconds; the purifier will beep once and the water droplet LED light will stop flashing. The filter reset has now been completed.
- ⑨ **For LWA200 Model:** Turn the FUNCTION dial until the indicator on the LCD screen reaches the FILTER RESET function and press the FUNCTION button once to reset the filter counter. FILTER RESET will no longer illuminate on the LCD screen.
- ⑩ The purifier is now ready to use.



the Activ360™ Filter Replacement Instructions for LWA300/LWA600

- ① Lift the water tank from the purifier, remove the lid and set aside. Lifting by the ring, remove the filter cartridge from the filter holder and discard any remaining water inside the water tank.
- ② Remove the new filter cartridge from its packaging
- ③ Immerse the filter in a bowl of tap water and gently shake until there are no air bubbles. Soak filter in the cold tap water for 10 minutes.
- ④ Once soaked, insert the cartridge into the filter holder of the water tank and push down firmly to secure in place.
- ⑤ To flush and activate the new filter cartridge, add 2L of tap water to the water tank.
- ⑥ **For LWA300** Turn dial to ambient and press START/STOP button once to dispense the 2L of water into a container of appropriate size. Once the 2L of water has been dispensed from the water tank, discard any remaining water in tank and refill with tap water to the MAX line. Return water tank to purifier. Turn dial to FILTER RESET and press and hold START/STOP button for 3 seconds to reset the filter counter. The filter reset has now been completed.
- ⑦ **For LWA600** Turn dial to ambient and press START/STOP button to dispense the 2L of water into a container of appropriate size. Once the 2L of water has been dispensed from the water tank, discard any remaining water in tank and refill with tap water to the MAX line. Return water tank to the purifier. Turn dial to FILTER RESET and press FUNCTION button once to reset the filter counter. FILTER RESET will no longer illuminate on the LCD screen The filter reset has now been completed.
- ⑧ The purifier is now ready to use.