

Breville Urn

Instruction Book – URN6



Breville®



Contents

- 2 Breville recommends safety first
- 7 Components
- 8 Using your Breville urn
- 9 Care, cleaning & storage

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material and promotional labels before using the urn for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this urn.
- This urn has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.

- Do not place the urn near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the urn on a sink drain board.
- Do not place the urn on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the urn clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the urn is properly assembled before use. Follow the instructions provided in this booklet.
- Do not move the urn while it is in operation.
- Do not operate the urn on an inclined surface.
- Do not leave the urn unattended when in use.
- The urn is not intended to be operated by means of an external timer or separate remote control system.
- Do not operate the urn without water in the vessel.
- Do not place the urn under any object, such as in a cupboard, when the urn is in use, as the escaped steam may cause damage to the overhead objects due to heating or water condensation.
- Do not touch hot surfaces. Use the carry handles for lifting and carrying the urn.
- Do not place anything on top of the lid.
- Always switch the urn to 'STAND BY', switch off at the power outlet and then remove the plug from the power outlet before attempting to move the urn, when the urn is not in use and before cleaning or storing.

- Use caution when dispensing water from the urn, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the urn, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not open the lid during operation.
- Do not overfill the urn past the maximum water level mark. If the urn is overfilled, boiling water may be ejected.
- Position the lid so that the steam holes are located to the rear side of the urn.
- Steam may escape from steam holes on top of the urn. Exercise caution at all time.
- Keep the urn clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- The appliance must be used on a properly grounded outlet. If it is not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
 - This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
 - Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
 - To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
 - Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.


- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Breville Service Centre for examination and/or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances.
- It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



Components

- A. 6 litre capacity
- B. Stainless steel body
- C. 1800 watt concealed element
- D. Non-drip tap with 2 way pouring action
- E. External water gauge
- F. Variable heat control
- G. Locking lid with ergonomic handles
- H. Automatic boil dry cut-out protects against overheating
- I. Power 'on' and 'heating' lights
- J. Extra-long cord with cord storage
- K. Drip tray
- L. Steam holes (on top of lid)

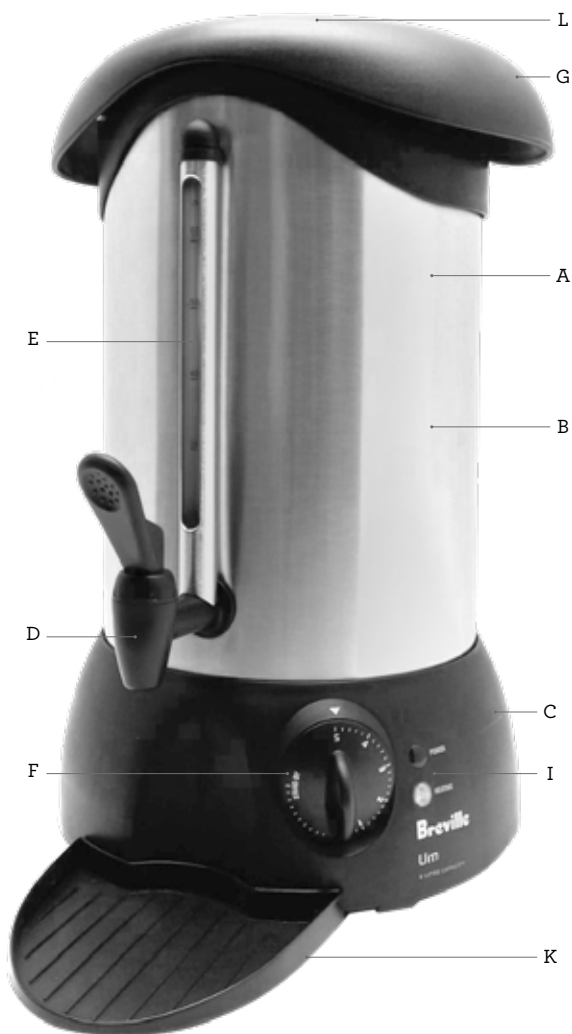

USING YOUR BREVILLE URN

BEFORE FIRST USE

It is recommended that before the first use, the Urn is filled to the maximum level, boiled and the water discarded.

1. Fully unwind power cord from base.
2. Place the Urn on a dry level surface and position the drip tray at the front of the Urn (tilt the Urn back slightly and slide the drip tray under to secure in place).



3. To fill with water, turn the locking lid anti-clockwise and remove. Use a smaller container to fill the Urn between the minimum and maximum marks. Too little water will result in the Urn switching off before the water has boiled.



WARNING


Do not fill above the maximum fill line on the external water gauge as boiling water may splash out from the Urn.

4. After filling the Urn, ensure that the lid is replaced and locked into position.
5. Plug the power cord into a 230/240V power outlet and switch the outlet on. The red power 'on' light will illuminate.

6. Turn the variable heat control to setting 5 (maximum) for fast boiling. The heating light will remain on. When the unit has boiled, select the desired setting between 1 (Minimum) to 4 to maintain temperature (Breville recommends setting 2 or 3 for tea or coffee). The heating light will cycle on and off maintaining the temperature selected.



7. To pour hot water, place a cup in the drip tray and push the non-drip tap down. For continuous pouring, lift the tap in the vertical position.

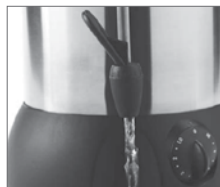

WARNING

The lid should always be fitted and locked into position when in use.

Use caution when pouring water from your Urn, as boiling water will scald.

Do not pour the water too quickly.

Do not open the lid when in operation as steam may escape from the top.

Steam may escape from the steam holes on top of the Urn. Exercise caution at all times.

Always empty the Urn before moving to a new position.

Never carry the Urn when in operation.

Always use the handles to carry the Urn.

SAFETY BOIL DRY PROTECTION

The Urn is fitted with a safety device which protects against overheating should the Urn be operated with insufficient water or has boiled dry. If this occurs, the Urn will stop heating. Both the red and orange lights will turn off.

Switch off at the power outlet and allow the Urn to cool down completely. The safety device will then automatically reset and the Urn is now ready for use.



Care, Cleaning & Storage

CARE AND CLEANING

Always switch the Urn to Stand By, switch the power off at the power outlet and then remove the plug before cleaning. Never immerse the Urn controls or cord in water, or allow moisture to come in contact with these parts.

REMOVAL OF MINERAL DEPOSITS

Mineral deposits in tap water may cause the Urn interior to discolour. This may be removed by using a commercial kettle descaler which is available from most leading supermarkets, departments and hardware stores.

TO CLEAN THE POLISHED EXTERIOR

The stainless steel surface may be wiped over with a damp cloth and polished with a soft dry cloth.



WARNING

Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the Urn.



Notes



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo and Master Every Moment
are trademarks of Breville Pty. Ltd. A.B.N. 98 000 092 928.

Copyright Breville Pty. Ltd. 2020.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

URN6 A20